

---

---

## KEY ASSIGNMENT MODE

---

---

This transceiver allows you to reprogram the **Side 1** and **Side 2** keys with any of the functions listed in the table below. Explanations on the use of each function are provided under “PROGRAMMABLE FUNCTIONS”, on page 22.

Table Number	Function Name
0	None (no function)
1	Calling Alert
2	Key Lock
3	Key Lock with Status Memory
4	Monitor
5	Monitor Momentary
6	Scan
7	Scan + Temporary Delete ( <b>Side 2</b> key default)
8	Scrambler
9	Squelch Off
10	Squelch Off Momentary
11	Temporary Delete
12	Super Lock ( <b>Side 1</b> key default)
13	Low Transmit Power

To change the functions of the **Side 1** and **Side 2** keys:

- 1 With the transceiver power OFF, press and hold the **Side 1** and **Side 2** keys while turning the transceiver power ON.
  - Continue to hold the **Side 1** and **Side 2** keys until the LED lights orange and the transceiver announces “Setup”.
- 2 Continue to press and hold the key to be reprogrammed (either the **Side 1** or **Side 2** key), while releasing the remaining key.
  - The transceiver will announce “Table zero”.
  - If you continue to hold both keys, or if you release both keys, the operation will cancel in 5 seconds.
- 3 Release the key.
- 4 Press the **Side 1** or **Side 2** key to increment/ decrement the number, to select the new key function.
  - Table numbers and their corresponding functions are provided in the table on page 20.
  - A voice announcement will inform you of the currently selected Table number.
- 5 Press the **PTT** switch to save the setting.
  - A beep will sound and the transceiver will announce the new Table number.
- 6 Turn the transceiver power OFF and then ON again to activate the new settings.

---

**Note:** The transceiver will automatically return to normal operation if no action is performed for 5 seconds.

---